
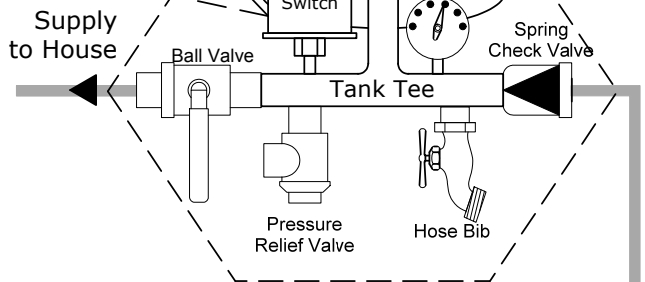



Turn CW to raise
CUT ON & OFF pressure

Turn CW to raise
OFF pressure

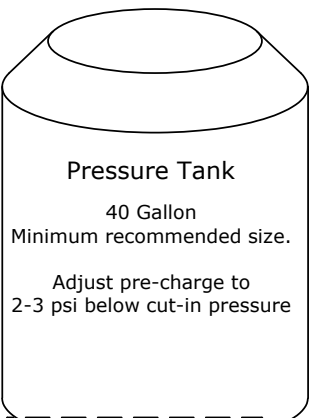


PS Controller

L1/L2/L3 must match the numbers on pump leads.
Other combinations may cause reverse rotation!!
For wire size, refer to HR PUMP Sizing Table.

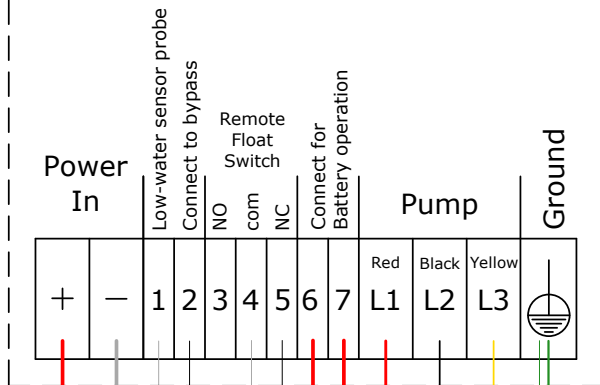

Battery Power--
Protect with 20 amp
fuse or disconnect

If not using
Low Water Probe,
Jumper Terminals 1 and 2

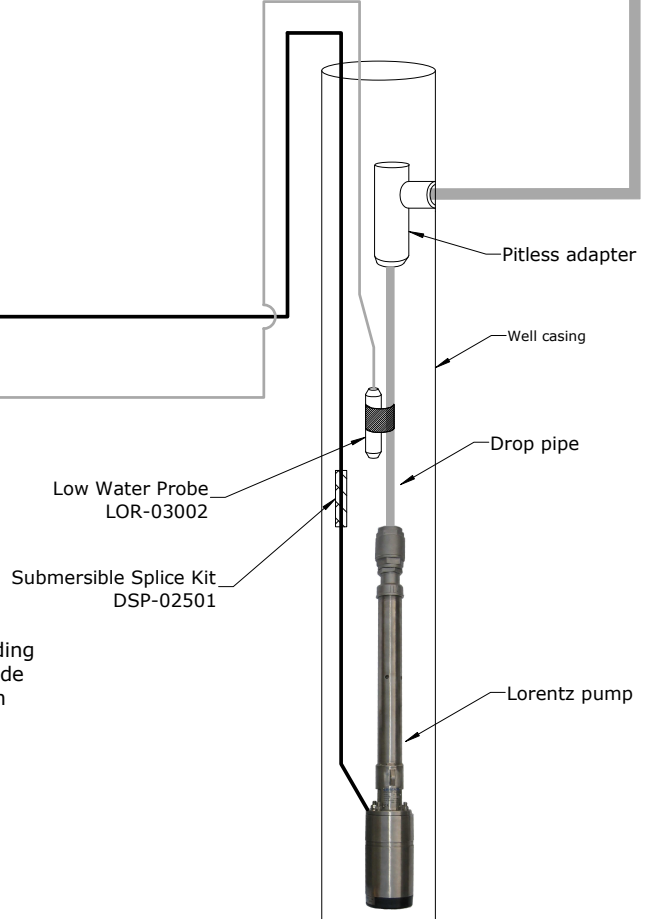

Grounding
Electrode
System

Solar Power & Pump Co.
Elk City, OK
580-225-1704
1-866-246-7652